

## Connecting Deister PRX5 proximity reader to Net2

### Technical Support

01273 811011


[support@paxton.co.uk](mailto:support@paxton.co.uk)

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)  
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

### Net2 Reader Connections:

Cable Pinout	ACU terminal
3	+12V
8	Red LED
-	Amber LED
7	Green LED
5	Wiegand D0
4	Wiegand D1
-	NOT USED
0 & 6	0V

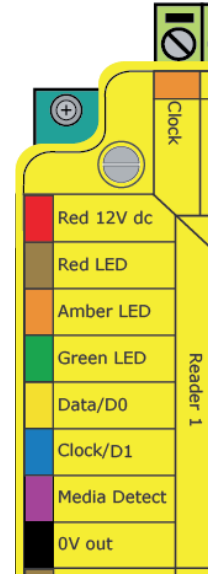

Ensure any unused wires are safely terminated.

### Additional information:

The output from the reader can be either Clock/Data or Wiegand, so please refer to Deister for this information if unknown. If the output is Wiegand, the bit pattern will be dependent on the encoding on the tokens, and this will need to also be confirmed so the correct settings can be applied to the Net2 software.

### Additional settings:

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.