

Connecting Identec Census EC1 proximity reader to Net2

Technical Support



01273 811011




support@paxton.co.uk

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

Net2 Reader Connections:

Cable Pinout	ACU terminal
V+	+12V
-	Red LED
-	Amber LED
LED	Green LED
D0	Wiegand D0
D1	Wiegand D1
-	NOT USED
0V	0V

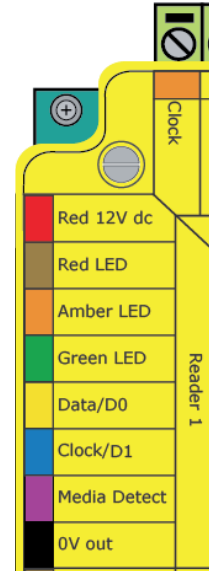

Ensure any unused wires are safely terminated.

Additional information:

The Census EC1 has a fixed 26 bit Wiegand output, regardless of the encoding on the card. The token data format in the Net2 software should be left as the embedded 26 bit Wiegand format.

Additional settings:

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.