

## Connecting IDTECK RF range proximity readers to Net2

### Technical Support



01273 811011




[support@paxton.co.uk](mailto:support@paxton.co.uk)

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)  
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

### Net2 Reader Connections:

Cable Pinout	ACU terminal
Red	+12V
-	Red LED
-	Amber LED
Yellow	Green LED
Green	Data / Wiegand D0
White	Clock / Wiegand D1
-	NOT USED
Black	0V

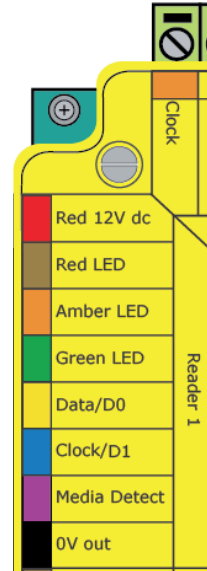

Ensure any unused wires are safely terminated.

### Additional information:

The IDTECK RF10, RF20, RF Tiny & RF30 all connect to the Net2 ACU in the same manner.

### Additional settings:

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.