

## Connecting an Indala 20112-005 Reader to Net2

### Technical Support



01273 811011



[support@paxton.co.uk](mailto:support@paxton.co.uk)

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)  
Saturday from 09:00 - 13:00 (GMT)


Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

### Format:

This reader will only read 10022 Indala Format 26-bit encoded Proximity cards. Other 26 bit cards may be read but will produce the wrong number.

### Net2 Reader Connections:

Cable Pinout	ACU terminal
Red	+12V
-	Red LED
-	Amber LED
Brown	Green LED
Green	Data / Wiegand D0
White	Clock / Wiegand D1
-	NOT USED
Black	0V

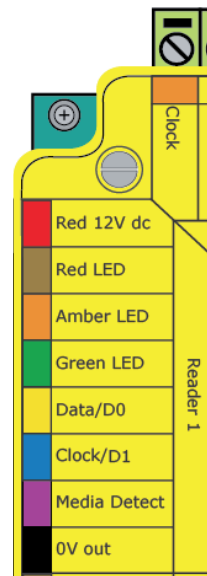

Ensure any unused wires are safely terminated.

### Additional information:

FlexSmart Slim proximity readers. FlexSmart Arch and Wave readers mount on any North American standard electrical gang box or any flat surface.

Data supplied by Advanced Access Ltd. Further information is available at: <http://www.advanced-access.co.uk/>

### Additional settings:

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.