

Connecting Morley MV-2 Versatile reader to Net2

Technical Support

01273 811011


support@paxton.co.uk

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

Net2 Reader Connections:

Cable Pinout	ACU terminal
Red	+12V
-	Red LED
-	Amber LED
Orange	Green LED
Green	Data / Wiegand D0
White	Clock / Wiegand D1
-	NOT USED
Black & Screen	0V

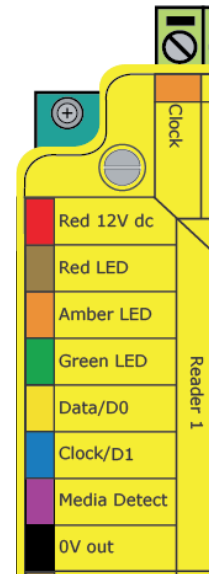

Ensure any unused wires are safely terminated.

Additional information:

The output from the Morley MV-2 Versatile reader is 26 bit Wiegand as standard.

The MV-2 Versatile reader uses the HID 125 kHz OEM module and therefore reads compatible HID tokens.

Additional settings:

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.