

Connecting Aritech ATS 1192 proximity reader to Net2

Technical Support

01273 811011


support@paxton.co.uk

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

Net2 Reader Connections:

Cable Pinout	ACU terminal
Red	+12V
Brown	Red LED
-	Amber LED
Yellow	Green LED
Green	Data / Wiegand D0
White	Clock / Wiegand D1
-	NOT USED
Black	0V

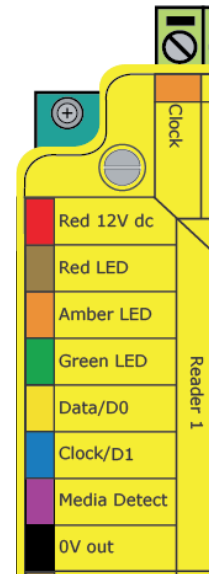

Ensure any unused wires are safely terminated.

Additional information:

The reader tested has a 48 bit Wiegand output, and this appears to be fixed, rather than token dependent.

Therefore, a custom Wiegand rule will need to be created within the Net2 software.

Additional settings:

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.