

## Connecting an Indala Legacy ASR-505 Proximity Wall Switch reader to Net2

### Technical Support

 01273 811011


 [support@paxton.co.uk](mailto:support@paxton.co.uk)

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)  
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

### Net2 Reader Connections:

Cable Pinout	ACU terminal
Red	+12V
Brown	Red LED
-	Amber LED
Orange	Green LED
Green	Data / Wiegand D0
White	Clock / Wiegand D1
-	NOT USED
Black	0V

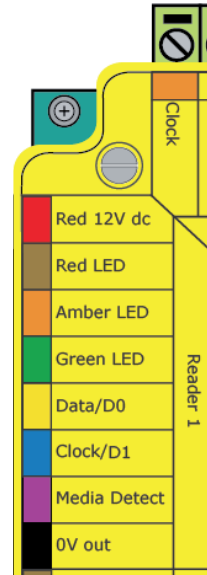

Ensure any unused wires are safely terminated.

### Additional information:

The HID Legacy Wallswitch proximity reader was formally known as the “Indala ASR-505 Wallswitch”.

The unit tested by Paxton Access was a 34 bit Wiegand example.

Further information on use and programming is available at:

[http://www.hidglobal.com/prod\\_detail.php?prod\\_id=132](http://www.hidglobal.com/prod_detail.php?prod_id=132)

### Additional settings:

To configure the LED setting, open the Net2 server configuration utility and on the ‘General’ tab, check the ‘Display reader LED’s in OEM style’ box.

If the option is not available, please contact Technical support for further advice.