

Technical Support



01273 811011



support@paxton.co.uk

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)
Saturday from 09:00 - 13:00 (GMT)


Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

S10 and SW100

FlexSmart® MIFARE/DESFire format compatibility.

Net2 Reader Connections:

Terminal Block	ACU terminal
8	+12V
2	Red LED
	NOT USED
1	Green LED
4	Data / Wiegand D0
3	Clock / Wiegand D1
	NOT USED
7	0V

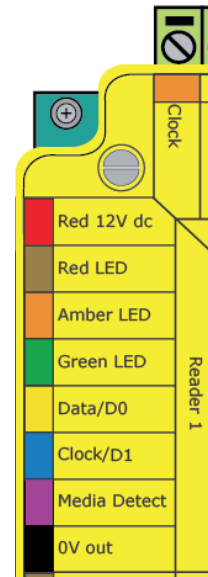

Additional information:

In Config Utility check: "Display reader LED's in OEM style"

Readers are available to output Wiegand or Clock and Data

Further information on use and programming is available at:

http://www.hidglobal.com/documents/smartid_gen2_ds_en.pdf

Additional settings:

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.