

Technical Support

 01273 811011

 support@paxton.co.uk


Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

HID Indala produce a wide range of Flexpass readers.
They are capable of outputting in either Wiegand or mag stripe (Clock and Data) format.

Net2 Reader Connections:

Cable		ACU terminal
+12V DC	Red	+12
	-	Red LED
	-	Amber LED
Green LED	Brown	Green LED
Wiegand - Out 0	Green	Data/D0
Wiegand - Out 1	White	Clock/D1
	-	Not Used
0V / Screen	Black	0V

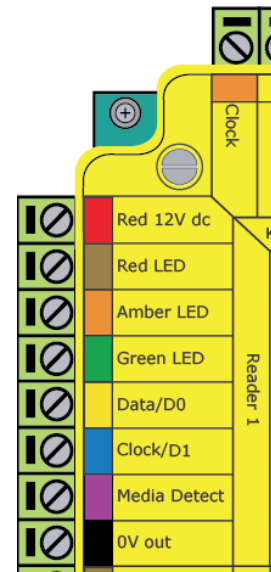

Additional information:

FlexSmart Arch and Wave readers mount on any North American standard electrical gang box or any flat surface.

Further information is available at:

http://www.hidglobal.com/technology.php?tech_cat=8&subcat_id=10

Additional settings:

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.