

## Connecting an ACT 1030 proximity reader to Net2

### Technical Support



01273 811011




[support@paxton.co.uk](mailto:support@paxton.co.uk)

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)  
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

### Net2 Reader Connections:

Cable Pinout	ACU terminal
Red	+12V
-	Red LED
-	Amber LED
Yellow	Green LED
Blue	Wiegand D0
Green	Wiegand D1
-	NOT USED
Black	0V

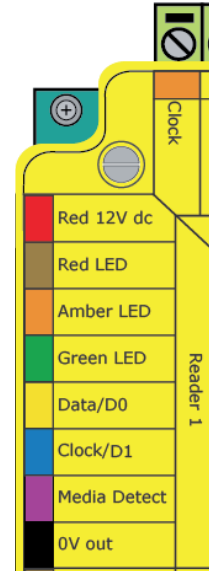

Ensure any unused wires are safely terminated.

### Additional information:

The ACT 1030 proximity reader uses the HID 125 kHz OEM module, and therefore will read any compatible HID token.

The reader is available with either a Clock and Data or Wiegand output. If this is unknown, this will need to be confirmed with ACT to ensure the correct settings can be applied to the Net2 software.

### Additional settings:

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.