


Connecting a reader to a Cotag HF500/HF100

Technical Support

 01273 811011



support@paxton.co.uk


Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

The HF500 is an Interior hands free reader. There is an HF100 that is for external use.

Net2 Reader Connections:

Cable Pinout	ACU terminal
Vin	+12V
R	Red LED
A	Amber LED
G	Green LED
D0	Data / Wiegand D0
D1	Clock / Wiegand D1
-	NOT USED
0v	0V

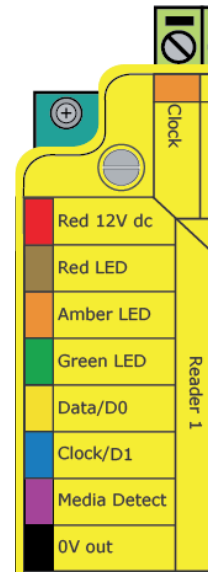

Ensure any unused wires are safely terminated.

Additional information:

It reader is compatible with all Cotag active cards and tags.

1 metre reading range when used with Bewator's Cotag® Hands-Free technology cards & tags
30cm reading range when used with Bewator's Proximity Technology cards & tags

Further information is available: <https://www.norbain.co.uk/products//ref:0105980/>

Additional settings:

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.