

Connecting a HID Proxpoint Plus reader to Net2


Overview

The output from the reader can be either Wiegand (base part number 6005) or Clock & Data (base part number 6008). This is factory or field configurable using configuration cards available from HID. The bit output from the reader is dependent on the card encoding being used. This should be confirmed with HID if unknown, to ensure the correct settings are applied in the Net2 software.

As standard, the reader is set to control the LEDs. This must be changed to LED host control, using the configuration card HID06 LED and Beep card, available from HID.



| Cable Pinout | ACU terminal |
|----------------|--------------|
| Red | +12V |
| Brown | Red LED |
| - | Amber LED |
| Orange | Green LED |
| Green | Wiegand D0 |
| White | Wiegand D1 |
| - | NOT USED |
| Black & Screen | 0V |

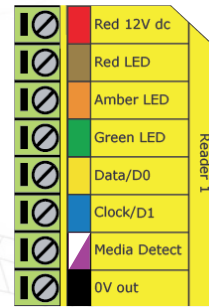


Ensure any unused wires are safely terminated.

To configure the LEDs to operate correctly, open the Net2 Configuration Utility, and on the 'General' tab, check the 'Display reader LED's in OEM style' box. If the box is not present, please contact our technical support team for further advice.

 +44 (0)1273 811011
 support@paxton.co.uk
 paxton.support


 +49 (0) 251 2080 6900
 support@paxton-gmbh.de
 paxton.gmbh.support


 +33 (0)157 329356
 support@paxtonaccess.fr
 paxton.support


 +32 (0)78485147
 support@paxton-benelux.com
 paxton.benelux.support


 +31 (0)76 3333 999
 support@paxton-benelux.com
 paxton.benelux.support

 +27 (0)21 4276691
 support@paxtonaccess.co.za
 paxton.support

 +1(800) 672-7298
 supportUS@paxton-access.com
 usapaxton.support

 +11 5715088198
 soporte@paxton-access.com
 paxton.soporte

 +1 (864) 751-3501
 soporte@paxton-access.com
 paxton.soporte

 8000 3570 3783
 support@paxtonaccess.ae
 paxton.support

 +44 (0)1273 811011
 support@paxton.co.uk
 paxton.support