


Connecting a HID SmartID readers to Net2

Overview

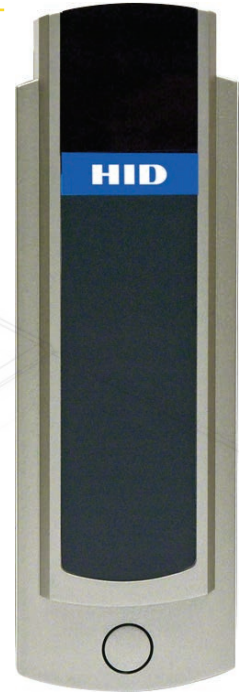


FlexSmart® MIFARE/DESFire format compatibility.

In Config Utility check: "Display reader LED's in OEM style"

Readers are available to output Wiegand or Clock and Data

Terminal Block	ACU terminal
8	+12V
2	Red LED
-	Amber LED
1	Green LED
4	Wiegand D0
3	Wiegand D1
-	NOT USED
7	0V

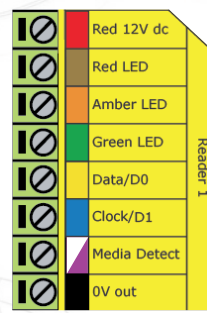

Ensure any unused wires are safely terminated.

Further information on use and programming is available at:

http://www.hidglobal.com/documents/smartid_gen2_ds_en.pdf


To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.

 +44 (0)1273 811011
 support@paxton.co.uk
 paxton.support


 +49 (0) 251 2080 6900
 support@paxton-gmbh.de
 paxton.gmbh.support


 +33 (0)157 329356
 support@paxtonaccess.fr
 paxton.support

 +32 (0)78485147
 support@paxton-benelux.com
 paxton.benelux.support


 +31 (0)76 3333 999
 support@paxton-benelux.com
 paxton.benelux.support

 +27 (0)21 4276691
 support@paxtonaccess.co.za
 paxton.support

 +1(800) 672-7298
 supportUS@paxton-access.com
 usapaxton.support

 +11 5715088198
 soporte@paxton-access.com
 paxton.soporte

 +1 (864) 751-3501
 soporte@paxton-access.com
 paxton.soporte

 8000 3570 3783
 support@paxtonaccess.ae
 paxton.support

 +44 (0)1273 811011
 support@paxton.co.uk
 paxton.support