

## Connecting HID ProxPro II to Net2

### Technical Support



01273 811011




[support@paxton.co.uk](mailto:support@paxton.co.uk)

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)  
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

### Net2 Reader Connections:

Cable Pinout	ACU terminal
Red	+12V
Brown	Red LED
-	Amber LED
Orange	Green LED
Green	Data / Wiegand D0
White	Clock / Wiegand D1
-	NOT USED
Black & Screen	0V

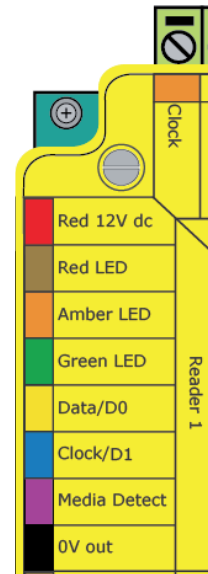

Ensure any unused wires are safely terminated.

### Additional information:

The output from the reader can be either Wiegand (base part number 5455) or Clock & Data (base part number 5458). This is factory or field configurable using configuration cards available from HID. The bit output from the reader is dependent on the card encoding being used. This should be confirmed with HID if unknown, to ensure the correct settings are applied in the Net2 software.

As standard, the reader is set to control the LEDs. This must be changed to LED host control, using the configuration card HID06 LED and Beep card, available from HID.

If the ProxPro II has an embedded keypad, only the proximity part of the reader can be used with Net2.

### Additional settings:

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.