

## Connecting IDTECK FGR006 biometric reader to Net2

### Technical Support



01273 811011




[support@paxton.co.uk](mailto:support@paxton.co.uk)

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)  
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

### Net2 Reader Connections:

Cable Pinout	ACU terminal
Red	+12V
-	Red LED
-	Amber LED
-	Green LED
Green	Data / Wiegand D0
White	Clock / Wiegand D1
-	NOT USED
Black	0V

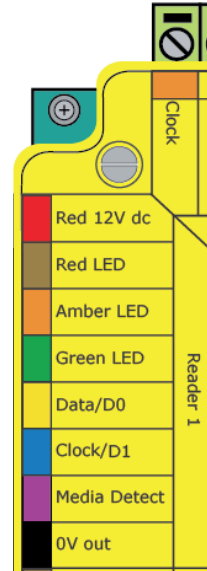

Ensure any unused wires are safely terminated.

### Additional information:

The IDTECK FGR006 biometric reader will need to be configured as per the instructions supplied with the reader.

Once correctly configured, the Net2 ACU will need to be set up as a desktop reader, so the users can be added into the Net2 software.