


Technical Support

 01273 811011

 support@paxton.co.uk

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)
Saturday from 09:00 - 13:00 (GMT)


Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

The RT20 is a 4 button mini transmitter that is preprogrammed with 4 user numbers, one per button. The matching RCD15 receiver (868.3MHz) converts the incoming Easywave telegram into a 26bit Wiegand number for the Net2 ACU. Range 30m to 100m.



Net2 Reader Connections:

Cable Pinout	ACU terminal
Red	+12V
-	-
-	-
-	-
Yellow	Wiegand D0
Blue	Wiegand D1
-	-
Black	0V

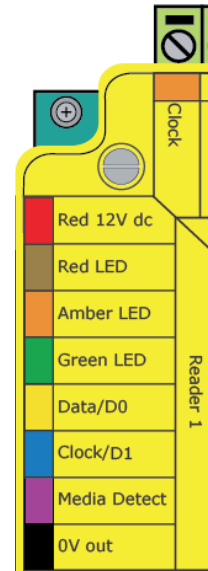

Additional information:

In Net2, Door Settings, change "Reader Type" to "Wiegand Reader". You can either use the Paxton 26bit Wiegand format or create a Custom 26bit mask in the Server Config utility.

Once powered up, set the ACU port to 'Desktop Reader' and then press one of the buttons on the transmitter. You can then create a user record from the resulting 'Add User' screen. - Set the port back to 'Token only'

You can create individual user records for each of the four buttons and then position an RCD15 alongside each of the ACUs that you wish to operate. By setting up the access permissions for each of the 4 user records(buttons) you can determine which ACU will respond to each button.

Additional settings:

Further information on use and programming is available at:

<http://www.eldat.de/en/products/easywave/30-sender-easywave/83-minihandsender-rt20.html>

<http://www.eldat.de/en/products/easywave/receivers.html>