


## Ins-30093 PROXIMITY vandal proof compact reader

### Technical Support

 01273 811011

 [support@paxton.co.uk](mailto:support@paxton.co.uk)

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)  
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

### Suitability

Security-sensitive doors



Mounted on metal surface



Wet environments




Readers mounted together

**300 mm**  
between  
readers

### Fitting

Open hole - medium vandal resistance

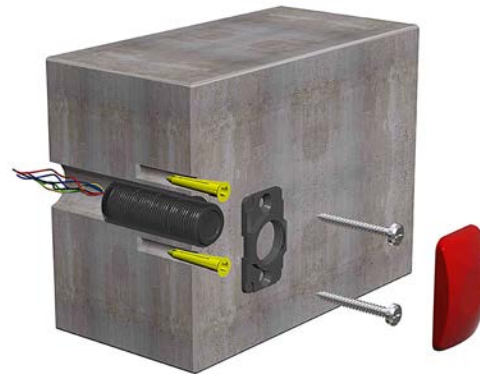


Cement plug - high vandal resistance

Blind hole - very high vandal resistance




### Reader covers

Additional covers are available in black, white, grey, solid blue, clear blue, green and yellow. Registered installers can order these free of charge by logging onto the secure installer extranet: <http://paxton.info/1035> or if you are not a registered installer please call us on: **01273 811011** for more information.

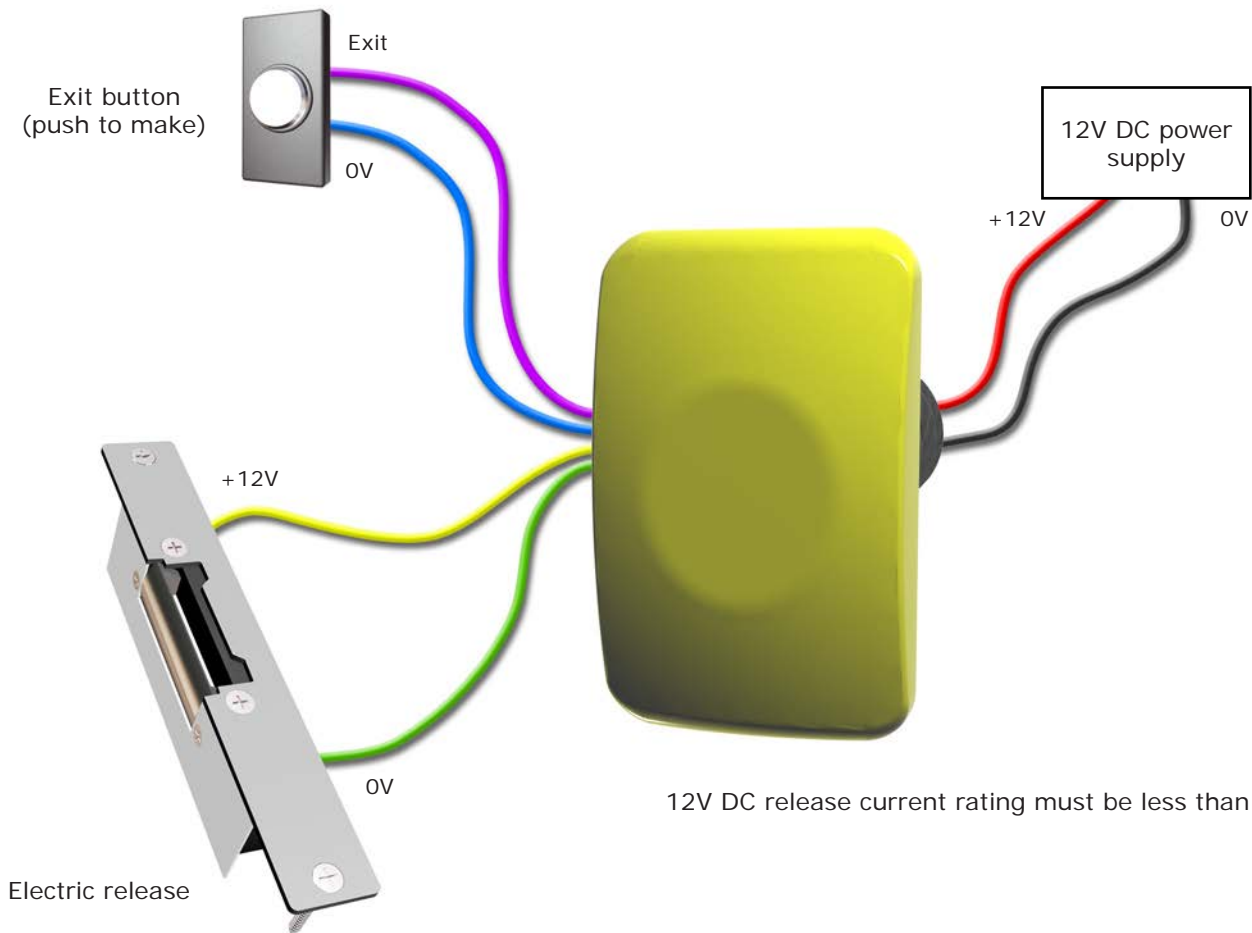

12V DC release current rating must be less than 1A.

### Wire outputs

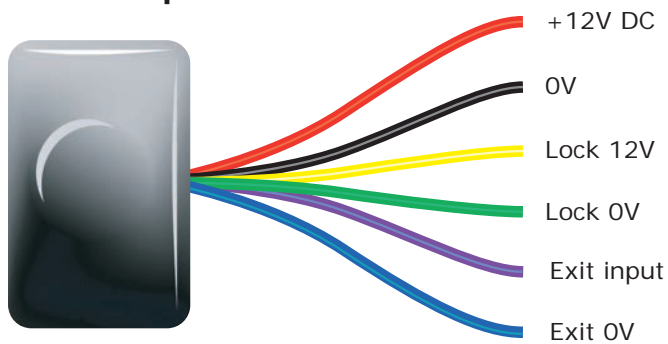

### Reset - Use one method


1. Power down the unit.
  2. Press and hold the exit button.
  3. Power up the unit. It will give several quick beeps.
  4. Wait for a further beep and then release and press the exit button twice more.
  5. The reader will beep 3 times to confirm the reset.
- OR
1. Present Enrolment card.
  2. Present Door open time card twice.
  3. Present Enrolment card.
  4. Present Door open time card twice.
  5. WAIT FOR 5 SECONDS!

### Enrolment Card - must be presented when the system is first powered on




1. Take the enrolment card from the new pack of user cards.
2. Present the enrolment card to the reader.
3. The reader will beep as the enrolment card is acknowledged.
4. All cards in the pack are now valid. The enrolment card can now be returned to its pack.

## Issuing tokens

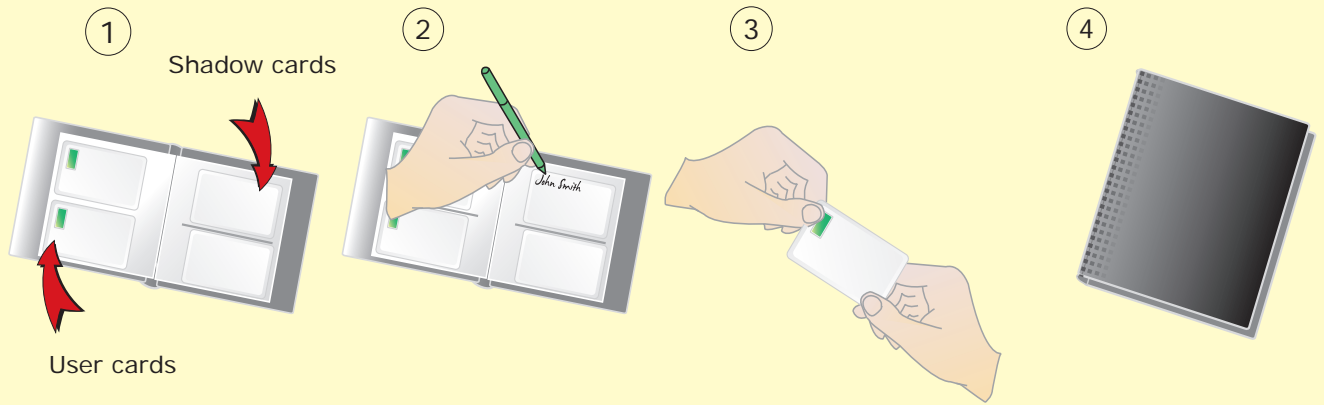


1. Across each double page there are pairs of cards - a user card and a corresponding shadow card.
2. Write the name of the user on the shadow card.
3. Take the user card from the opposite pouch and issue to the user.
4. Keep the card pack containing the shadow cards in a safe place.

## Bar a user

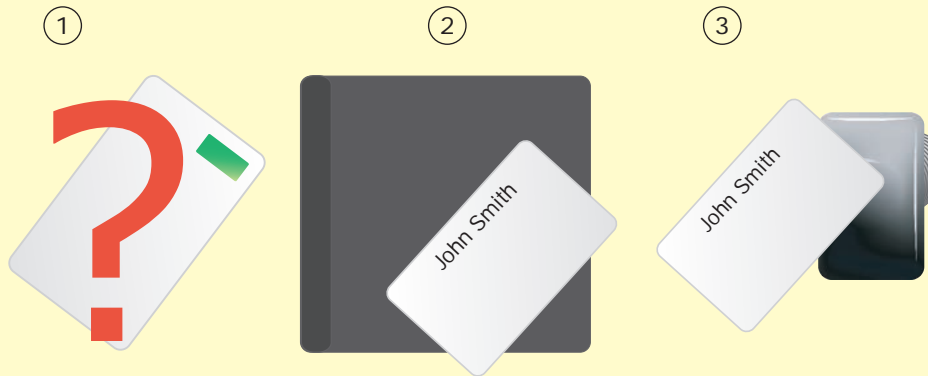

1. When a card is lost or stolen it is important to bar the card from your system to avoid unauthorized access.
2. To bar a card or token take its corresponding shadow card from the card pack.
3. Present the shadow card to the reader. This will remove the lost card or token from your system.
4. A barred card can be re-validated by presenting the enrolment card followed by the user card to the reader.


## Fail open release card - Compact systems are fail closed as default

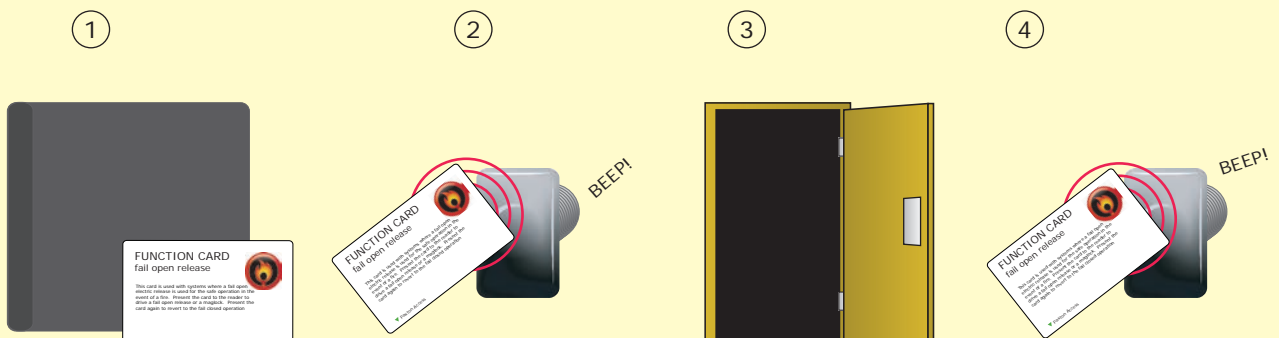

THIS CARD CAN ONLY BE USED WITH A FAIL OPEN LOCK.

1. Take the fail open release function card from the starter pack.
2. Present/swipe the card through the reader. The reader will beep for about a second.
3. The reader is now set to fail open mode. This allows safe operation of the door in case of fire: The lock will release when the power is cut.
4. To revert to fail closed mode, swipe the card again and the reader will beep once.

## Door open time (seconds)

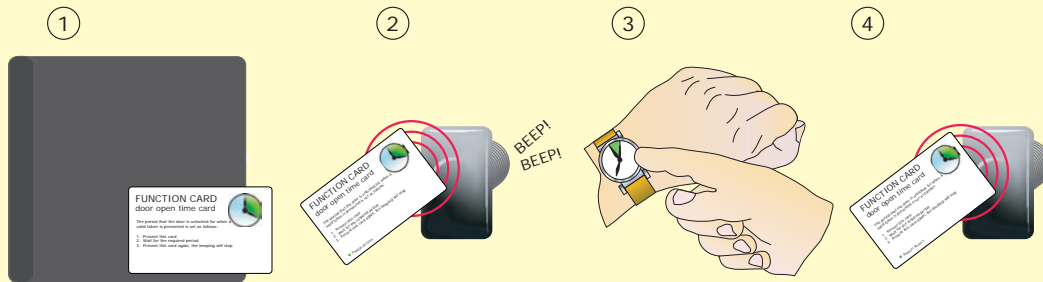

1. Take the 'door open time' card from the starter pack.
2. Present the card to the reader. The reader will start beeping.
3. Wait for the required period you wish the door to remain open.
4. Present the card again at the end of the period to set the open time. The beeping will stop.

## Silent operation



1. Take the silent operation function card from the starter pack.
2. Present the card to the reader. The reader will beep.
3. The reader is now in silent operation mode.
4. Present the card again to disable silent operation mode. The reader will beep twice.

## Specifications

Features	Min	Max	
Number of Users	1	10,000	
Number of Card Packs	1	100	
Door open time	1 sec	60 secs	
Time zones (with additional time clock)	1	2	
Access levels (Colour Zones)	1	3	
Silent operation			Yes
Can be used with fail OPEN locks			Yes
Can be used with fail CLOSED locks			Yes
Exit button input			Yes
Electrical	Min	Max	
Voltage	11V DC	14V DC	
Current		160mA	
Switchable current		1A	
Environment	Min	Max	
Operating temperature	-20 °C	+55 °C	
Waterproof	IPX7		Outdoor Use
Cable length			3 metres
Dimensions	Diameter	Depth	
	20 mm	60 mm	
Read Range	Token	Keyfob	Hands Free Token
	80 mm	40 mm	Not Compatible

CE0168

The declaration of conformity is available on request. Contact details are provided at: <http://paxton.info/596>